


# Outdoor Surface TAC

## Product Parts


1 - Graphic

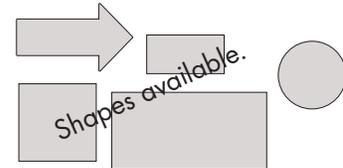

## Display Set-Up

### Step 1

Unroll the Graphic (1) and locate desired location.

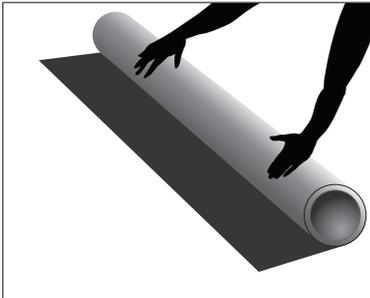

### Step 3

Snap a line or otherwise mark the perimeter of the application surface.

Starting at one corner, remove 6" of liner from the back side.

Orient the graphic on the surface; peel back the liner gradually as you are applying the graphic. A back and forth, pressing and smoothing motion is best.

Use your fingers, a soft roller or squeegee to work the graphic into any texture or cracks. Pay particular attention to the edges making sure they are securely adhered to the surface.

Using a floor roller, starting at the center and working out, covering the entire surface, helps to secure Graphic(1) to the surface.

Repeat process for additional panels if it is a large Graphic(1).

### Step 4

\*Removal:

Use a scraper to work up one corner.

Grab the raised corner then pull the material back at a 180 degree angle. The material should pull off in one piece. If the material tears use the scraper to start another edge.

Adhesive remover may be needed to remove any remaining adhesive from the surface.

### Step 2

Surface Preparation:

Prior to application the surface temperature must be above 50 degrees Fahrenheit. The surface should be clean, dry and oil-free. Remove any loose debris from the surface.

Try to stay 4" or more from curb gutter area of heavy water flow. Dirty surfaces may require power washing but, the surface must be dry before application.

Adhesive is pressure sensitive and will stick to any concrete, asphalt or cinder block surface.

## Storage & Care

**DO NOT FOLD YOUR SURFACE TAC PRIOR TO INSTALATION.**

Under normal traffic, simply sweeping the Outdoor Surface TAC with a soft broom will remove most loose particles. When the surface is visibly dirty, cleaning with a soft cloth soap and water will remove most soils.